

Universal anchor point

Reference number HLH700
 EN 795:2012 Type A
 CEN/TS/16415:2013

TABLE OF CONTENTS:

1. General	1
2. Spacing of post mounting holes	1
3. Inspection of technical condition	2
4. Release of anchor point to service	2
5. Installation of anchor post	3
6. Explanation of marking of product	4
7. Essential principles of use of personal fall protection equipment	4
8. Warranty	5
9. Identity Card	7

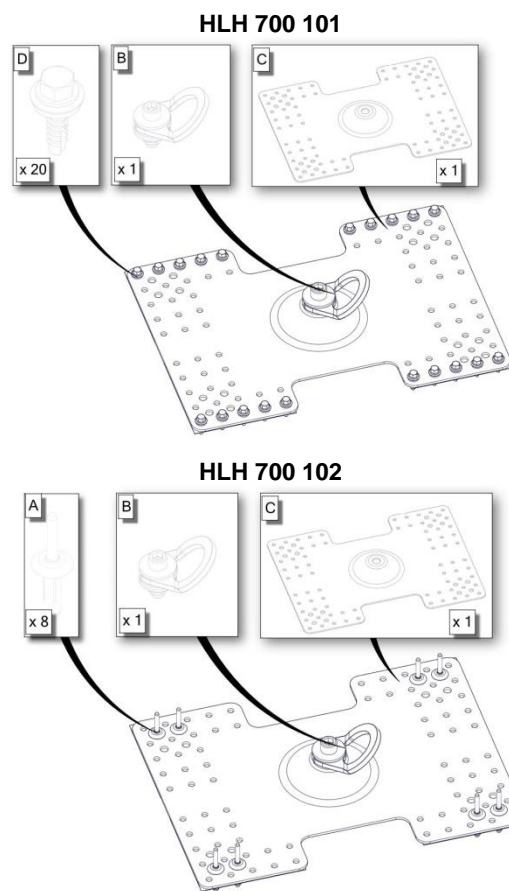
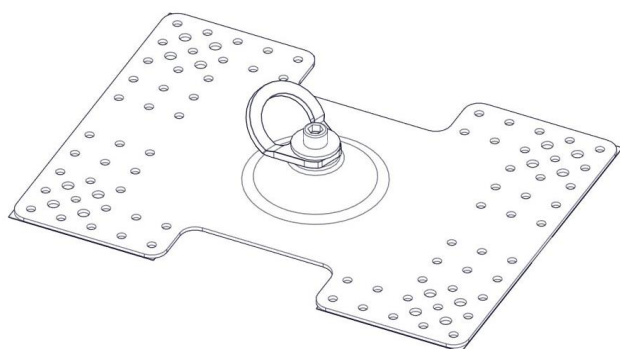


Figure 1. Composition of kits

- A- Blind rivet 7mm – 8 pcs.
- B- Rotary anchor point
- C- Post main plate
- D- Screw with gasket 5,5x25 mm

1. General

Anchor point is an anchor device compliant with EN795:2012 Type A and CEN/TS/16415:2013

Anchor point is made of stainless steel.

Anchor point is designed to be used by 3 users working at a time.

Due to increased strength of the anchor point, it can be installed with horizontal temporary lifeline fall protection systems, e.g. AE320, AE321.


Static strength of the post is min. 30 kN

The anchor point is designed to be installed in trapezoidal sheets min. 0,5mm in thickness.

Anchor post conforms to Regulation of the European Parliament and of the Council (EU) of 9 March 2016 on personal protective equipment 2016/425.

2. Spacing of post mounting holes

For kit HLH700 101

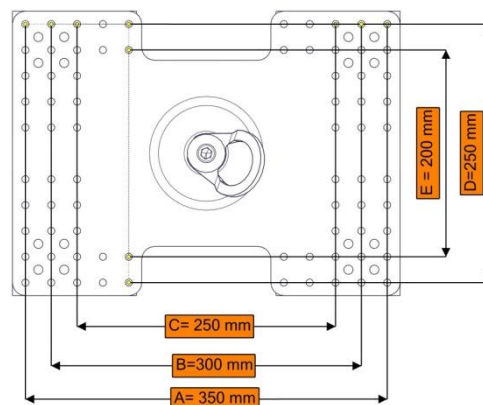

For kit HLH700 102

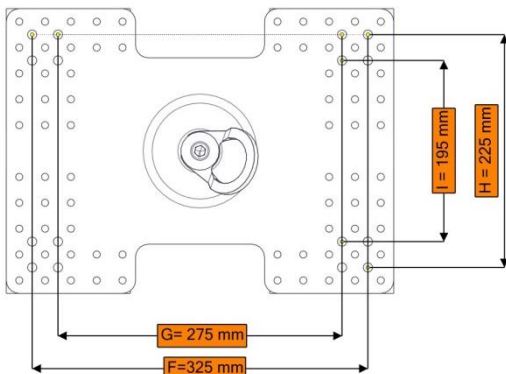


Figure 2. Arrangement of mounting holes

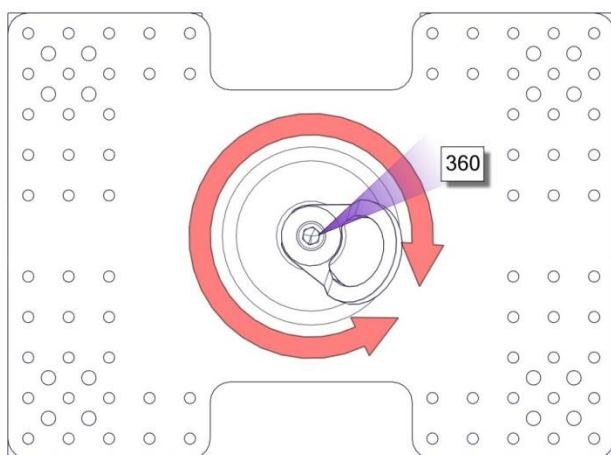
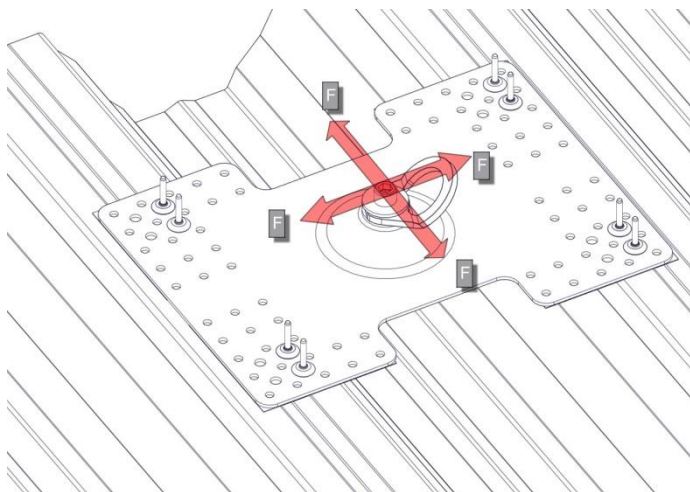


Figure 3. Loading direction of point

3. Inspection of technical condition

Anchor point as anchor post should be inspected periodically (at least once a year), and when disturbance of the supporting structure leading to deterioration of its protective characteristics is suspected.

Inspection should be carried out by a person in charge of personal protective equipment in user's organisation. Make sure to check polyester webbing for mechanical, chemical or thermal damages and its condition. Inspection of anchor sling and its release to further service should be recorded in the Identity card.

The device must be withdrawn from use immediately and destroyed if it has been used to arrest a fall or there are any doubts concerning its function.

NOTE: Maximum time of usage of the device depends on intensity and environment of use. If the device is used in heavy conditions, being exposed to frequent contact with water, sharp edges, corrosive substances, extreme of temperatures, it may be necessary to withdraw the device after only one use.

4. Release of anchor point to service

Before the device is used for the first time make sure to:

- inspect its technical condition by following procedure given in point 3 of the manual
- complete the Identity card with date of first release to service (record should be made by person in charge of personal protective equipment in user's organisation)

Anchor point should be used with relevant personal protective equipment against falls from height conforming to the following standards Figure 3:

Component of equipment	Standard
Personal protective equipment for work positioning	EN358
Lanyards	EN354
Energy absorbers	EN355
Retractable type fall arresters	EN360
Guided type fall arresters including a rigid and a flexible anchor line	EN353-2 and EN353-1
Descender devices for rescue	EN341
Connectors	EN362

Figure 3. Chart of compatible standards

5. Installation of anchor post

- Unpack the anchor point
- Determine position of anchor posts on a roof,
- Check direction of installation of plate according to direction of ridges of the trapezoidal sheet **Figure 4**
- According to thickness of trapezoidal sheet, select proper method of connection between post HLH700 and the sheet **Figure 5**

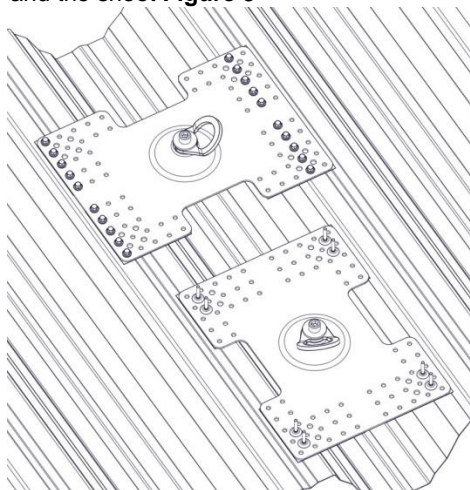


Figure 4. Positioning of post lengthwise and crosswise the trapezoidal sheet.

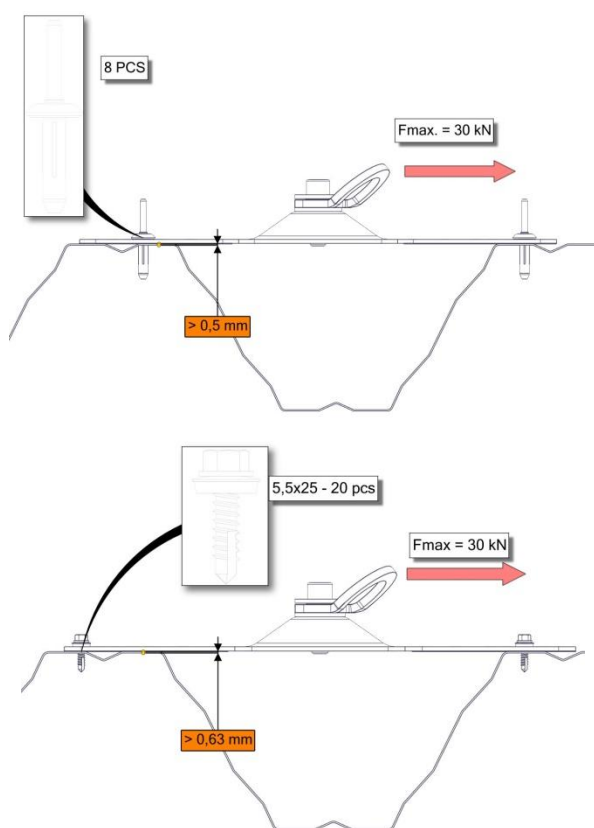


Figure 5. Selecting connection depending on sheet thickness

- Anchor point when used or stored should not be exposed to the following:
 - Direct contact with flame, sparks or hot objects
 - Contact with solvents, oils and strong acids and bases
- Before installation the anchor point should be stored in a clean place, free from vapours of aggressive substances and in conditions preventing any mechanical damages.
- Please take into account environmental conditions in the place of installation which may cause corrosion of the anchor point and fasteners.
- Follow general rules for use of personal fall protection equipment in accordance with EN 795:2012.
- Anchor points should be used in temperature between -30°C and 50°C.
- Determine position of the anchor point on ridges of the trapezoidal sheet **Figure 4** so the line of screws or rivets is run on the flat part of the sheet **Figure 6**

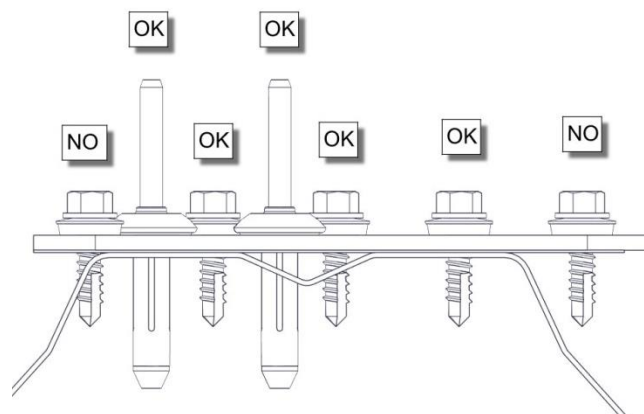


Figure 6. Correct positioning of screws/ rivets on sheet

- Then, using a screw gun, rotate screws clockwise until the screw is set correctly when the gasket is pressed as illustrated.
- For rivets, use proper riveting machine according to rivet diameter until rivet pin is broken.
- The post can be installed as an anchor point in horizontal temporary lifeline fall protection systems, the required strength of which is no more than 30kN. **Figure 7**
- The posts also can be used as indirect elements of such fall protection systems.
- When the post is installed using rivets, it can be used as an anchor point for work positioning. **Figure 8**

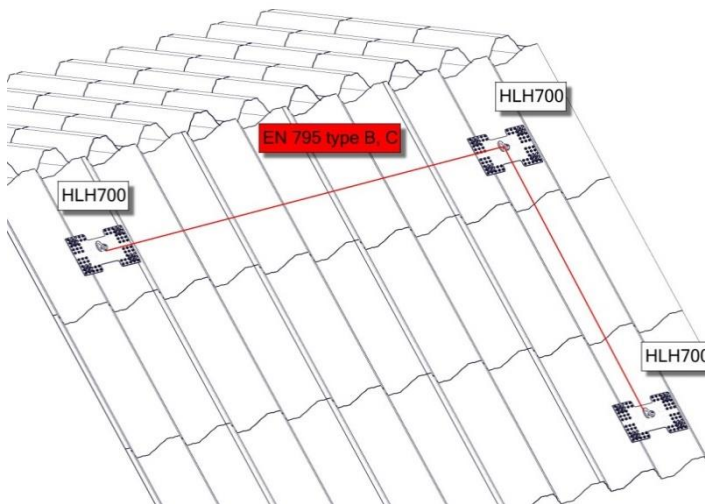


Figure 7. Example of installation of temporary fall protection systems

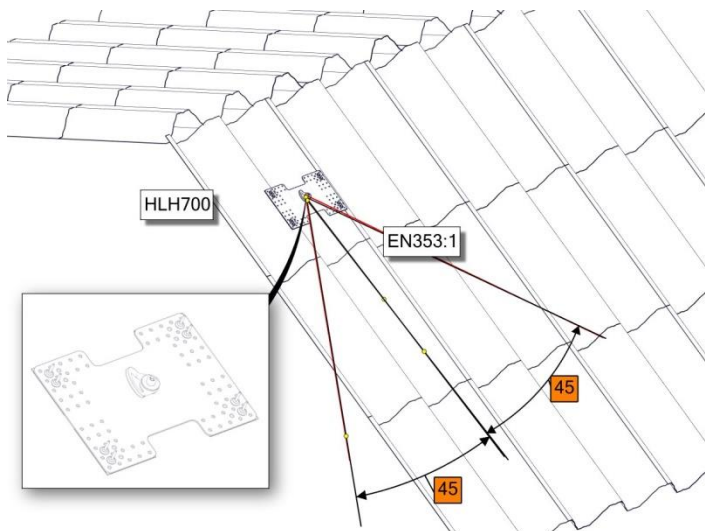


Figure 8. Installation of anchor point for work positioning

6. Explanation of marking of product

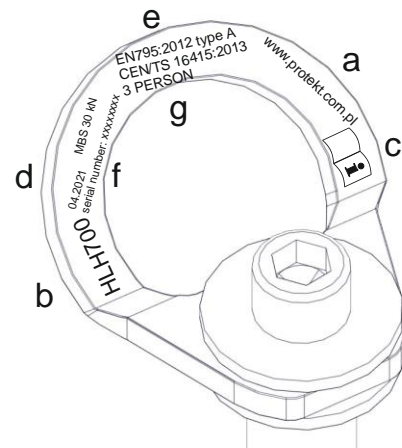


Figure 9. Marking of the product

- a- Manufacturer data
- b- Name of product
- c- Read the manual before use
- d- Date of manufacture
- e- No. of standard
- f- Serial number of product
- g- Number of simultaneous users of the device.

7. Essential principles of use of personal fall protection equipment

- Anchor device must be used in accordance with instruction manuals of personal fall protection equipment and standards:

EN 361 - full body harnesses

EN 352-3; EN 355; EN 360 - fall restraint devices

EN 362 - connectors

EN 795 - for anchor points

- personal fall protection equipment should be used only by personnel trained in its use.
- personal fall protection equipment must not be used by a person with medical condition that could affect safety of the equipment user in normal and emergency use.
- prepare a rescue plan to be implemented whenever necessary.
- it is forbidden to make any alterations or additions to the equipment without prior written consent given by the manufacturer.
- any repair shall only be carried out by manufacturer of the equipment or an authorised representative.
- personal fall protection equipment shall not be used for any purpose other than intended.
- personal fall protection equipment provides individual protection and shall be used by one person only.
- before each use make sure that all parts of fall protection system cooperate correctly. Periodically examine connections and fitting of components of the equipment to prevent any accidental loosening or disconnection.

- it is forbidden to use a combination of the equipment where function of any one component is affected by, or interferes with the function of any other.
- before each use of personal fall protection equipment, a pre-use check should be carried out to ensure that it is in a serviceable condition and operates correctly.
- in particular, inspect all accessible elements of the equipment for any damages, excessive wear, corrosion, abrasion, cutting or improper function. For individual devices pay particular attention to:
 - ✓ in full body harnesses and work positioning devices: buckles, regulating elements, attachment points (buckles), webbings, seams, belt loops;
 - ✓ in energy absorbers: attachment loops, webbings, seams, housing, connectors;
 - ✓ in lanyards and textile guides: rope, loops, thimbles, connectors, regulating parts, splices;
 - ✓ in lanyards and steel guides: rope, wires, clamps, loops, thimbles, connectors, regulating parts;
 - ✓ in retractable type fall arresters: lanyard or webbing, retractor and locking mechanism for proper operation, housing, energy absorber, connectors;
 - ✓ in guided type fall arresters: body, proper guiding, locking mechanism for proper operation, rollers, bolts and rivets, connectors, energy absorber;
 - ✓ in connectors (snap hooks): load-bearing body, rivets, main pawl, locking mechanism functionality.
- at least once a year, after each 12 months of use, personal fall protection equipment must be withdrawn from use to carry out periodic detailed inspection. Periodic inspection can be carried out by a person who is responsible for periodic inspections in user's organisation and properly trained in this respect. Periodic inspections can be carried out also by the manufacturer of the equipment or his authorized representative, or an authorized company. Inspect in detail all accessible elements of the equipment paying attention to any damages, excessive wear, corrosion, abrasion, cutting or incorrect function (see the above item.) In some cases, if the fall protection equipment has a complex design (e.g. fall arresters), periodic inspections can be carried out by manufacturer of the equipment, or his authorized representative only. After the periodic inspection, date of the next inspection should be marked.
- regular periodic inspections are essential in respect of the equipment condition and safety of users which is dependant on functionality and durability of the equipment.
- during periodic inspection it is necessary to check the legibility of all markings on the equipment (identity label of the device).
- all information on fall protection equipment (name, serial number, date of purchase and date of first use, name of user, information on repairs and inspections and withdrawal from use) must be provided in the Identity card of the device. It is responsibility of user's organisation to provide the Identity card and to fill in the required details. The Identity Card should be filled in by a person responsible for protective equipment. It is forbidden to use personal fall protection equipment if the Identity card is not filled in.
- if the equipment is re-sold outside the original country of destination the reseller must provide instructions for use, for maintenance, for periodic inspection and for repair in language of the country where the product is to be used.
- personal fall protection equipment must be withdrawn from use immediately if any doubts arise in regard of its condition, or proper operation. The equipment must not be used until manufacturer of the equipment carries out a detailed inspection and gives his written consent to use the equipment again.
- personal fall protection equipment must be withdrawn from use immediately and destroyed if it has been used to arrest a fall.
- full body harness is the only admissible device to be used to support the user's body in personal fall protection equipment.
- in full body harness, to attach a fall protection system use only attachment points (buckles, loops) marked with capital letter "A".
- Anchor point or device of the fall protection equipment should have a stable structure and position so as to prevent a possibility of the load fall and minimize a free fall distance. Anchor point of the equipment should be located above the user's work station.
- The shape and construction of the anchor point shall not allow for a self-acting disconnection of the equipment. It is recommended to use certified and marked anchor points of the equipment compliant with PN-EN 795.
- It is obligatory to verify the free space required under the user at workplace before each use of the fall protection system, so that, in case of a fall, there is no collision with the ground or other obstacle in the fall path. The required free space should be determined on basis of the data given in the instruction manual of the equipment to be used.
- Personal fall protection equipment must be transported in a package (e.g.: bag made of moisture-proof textile or foil bag or cases made of steel or plastic) to protect it against damage or moisture.
- Personal fall protection equipment should be cleaned without causing adverse effect on the materials used in the manufacture of the equipment. For textile materials (webbings, ropes) use agents suitable for delicate fabrics. Can be washed in hands or in a washing machine. Rinse thoroughly.
- Wash textile products with water only. If the equipment becomes wet, either when cleaning or in use, allow it to dry naturally, and keep it away from any sources of heat. In metallic products lubricate slightly some mechanical parts (springs, hinges, pawls, etc.) regularly to ensure their better operation.
- Personal fall protection equipment should be stored loosely packed in well-ventilated rooms, protected from direct light, UV degradation, dust, sharp edges, extreme temperatures and aggressive chemical substances.

8. Warranty

The manufacturer grants a warranty for 12 months from the date of purchase of the device. If a defect is found in any part, the warranty and guarantee period for this part is extended by the time of repairs and effective removal of the defect found.

The warranty covers:

- Defects in material,
- Defects in workmanship,
- Anti-corrosion coating defects

According to the requirements of EN 365 an anchor point shall be subject to periodic inspections carried out at least every 12 months. Periodic inspection shall be carried out by service point authorized by the manufacturer located at the following address:

PROTEKT GRZEGORZ ŁASZKIEWICZ

ul. Starorudzka 9

93-403 Łódź

or person trained in inspections of such equipment.

A trained person is a person who, based on own specialized education and adequate experience, has sufficient knowledge in installed protective and rescue equipment, and is familiarized with applicable OHS regulations, guidelines and generally acknowledged technical rules to such extent that is able to assess safety of use and correct application of protection devices.

Before each use of the system check whether date of the next inspection is not expired. Do not use the device after this date. Before each use of the system visually check the system for its integrity and technical condition and whether steel cable is tensioned.

If any defect or lack of integrity is found, do not use the point.

If any doubts arise as for the use of the equipment, please contact the manufacturer and never repair the equipment on your own!

A system which has been used to arrest a fall must be withdrawn from use immediately!

The system which has been used to arrest a fall may be admitted for use again after a detailed inspection is carried out by the manufacturer or an authorised service point.

When using the system, pay special attention to risks affecting operation of the personal fall protection equipment or the user's safety, and in particular to kinks and rope movement on sharp edges, oscillatory falls, electricity, influence of extreme temperatures, equipment damage, adverse environmental factors, chemical substances and contamination.

Neither modify, repair components of the system nor replace them with non-original spare parts.

9. Identity Card

IDENTITY CARD (compliant with EN365)					
Reference number of device	HLH700		Serial number:	
Date of first use (installation)		Date of manufacture:	
Place of installation				
User name:				
Inspection and repair record					
No .	Date of inspection	Type of inspection / repair	Remarks	Date of next inspection	Name and signature of service technician
1					
2					
3					
4					
5					
6					
7					
8					
9					
10					